

T670-BY REAR NOZZLE SET MIDRANGE (BLACK) SPREADER (YELLOW)

F/C, MIDRANGE/SPREADER REAR NOZZLE SET

Installation Instructions

Step 1

REMOVE OLD NOZZLES

Remove old plastic SPREADER (left) and MIDRANGE (right) from nozzle base.

Step 2

Sorow in SPREADER (loft)

Screw in **SPREADER** (left) FCI nozzle with proper orientation.

Screw in *MIDRANGE* (right) FCI nozzle with proper orientation.

Step 3

RE-INSTALL NOZZLE BASE

in conversion assembly with cap.

UNDERHILL • 6 JOURNEY #140 • Aliso Viejo, • CA 92656 www.underhill.us 1-866-UNDERHILL

