

Full Circle, RANGE/SPREADER NOZZLE SET

Installation Instructions

Step 1 REMOVE OLD NOZZLES
Remove old plastic RANGE (front)
and SPREADER (rear) from nozzle base.

Step 2 INSTALL NEW NOZZLES
Snap in RANGE (front) Profile nozzle
with proper orientation. Push nozzle hex with a
screwdriver or similiar tool leveraged inside the
rotor case until completely inserted.

Snap in **SPREADER** (back) Profile nozzle with proper orientation. Push nozzle hex with a screwdriver or similiar tool leveraged inside the rotor case until completely inserted.

Step 3 RE-INSTALL NOZZLE BASE in conversion assembly with cap.





www.underhill.us 1-866-UNDERHILL