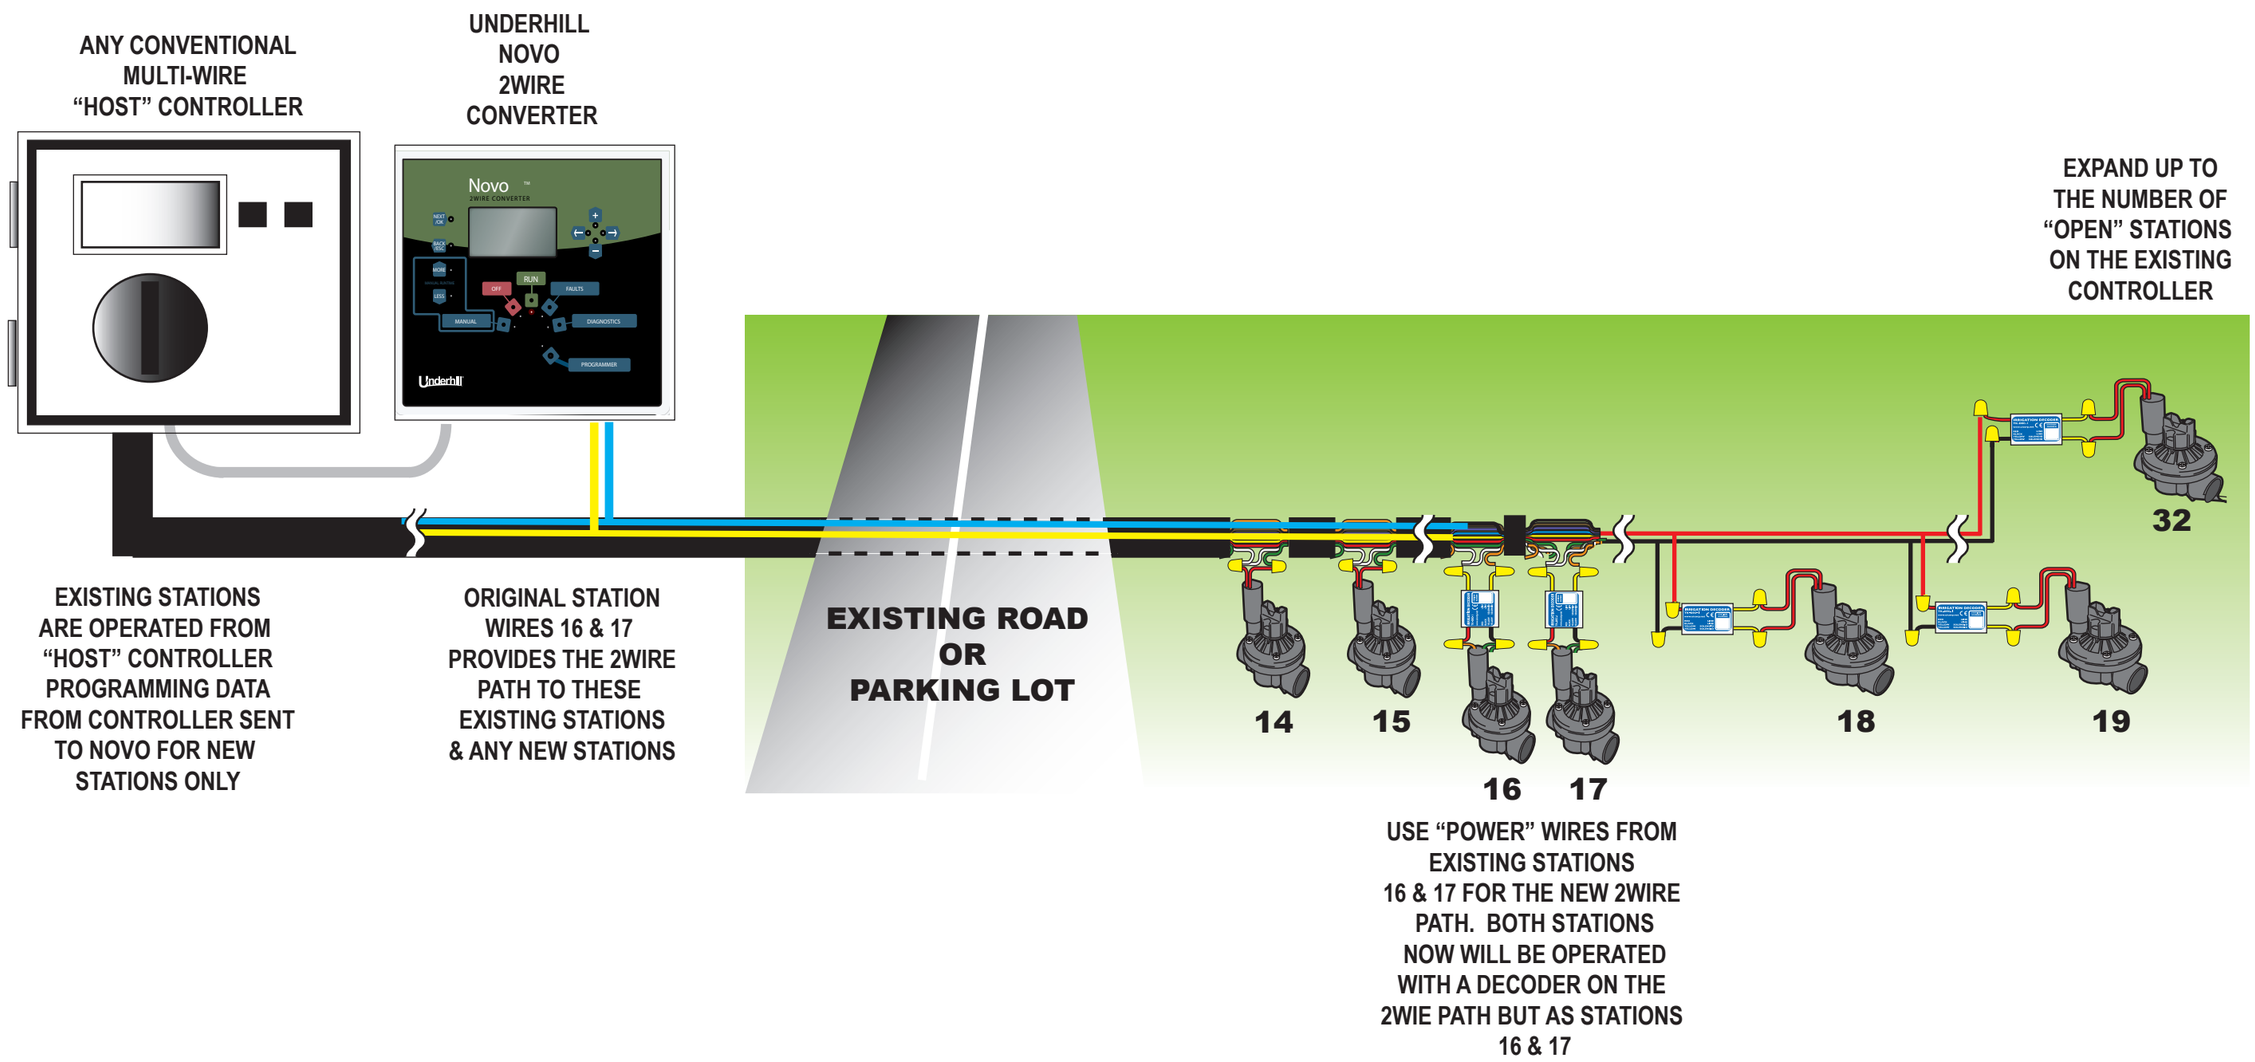
ANY CONVENTIONAL MULTI-WIRE "HOST" CONTROLLER
UNDERHILL NOVO 2WIRE CONVERTER
Novo
2WIRE CONVERTER
Underhill
EXPAND UP TO THE NUMBER OF "OPEN" STATIONS ON THE EXISTING CONTROLLER
32
EXISTING STATIONS ARE OPERATED FROM "HOST" CONTROLLER PROGRAMMING DATA FROM CONTROLLER SENT TO NOVO FOR NEW STATIONS ONLY
ORIGINAL STATION WIRES 16 & 17 PROVIDES THE 2WIRE PATH TO THESE EXISTING STATIONS & ANY NEW STATIONS
EXISTING ROAD OR PARKING LOT
14
15
16
17
18
19
USE "POWER" WIRES FROM EXISTING STATIONS 16 & 17 FOR THE NEW 2WIRE PATH. BOTH STATIONS NOW WILL BE OPERATED WITH A DECODER ON THE 2WIE PATH BUT AS STATIONS 16 & 17